



Follow these steps to change the video files:

1. Connect the USB cable to both the device and your computer.
This means charging only.

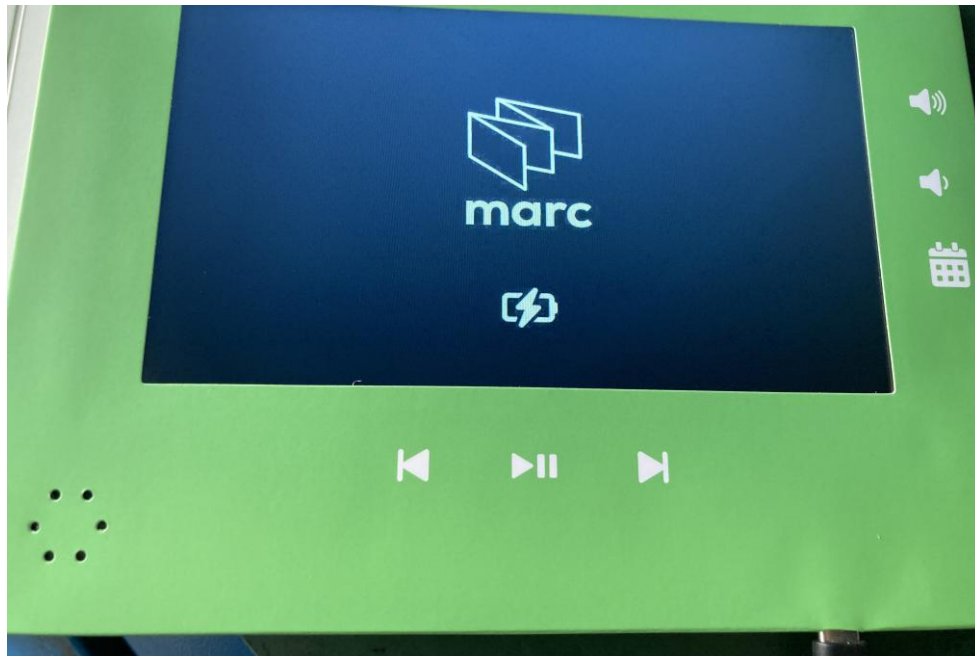

This means the connection was successful, and you can begin uploading the video.

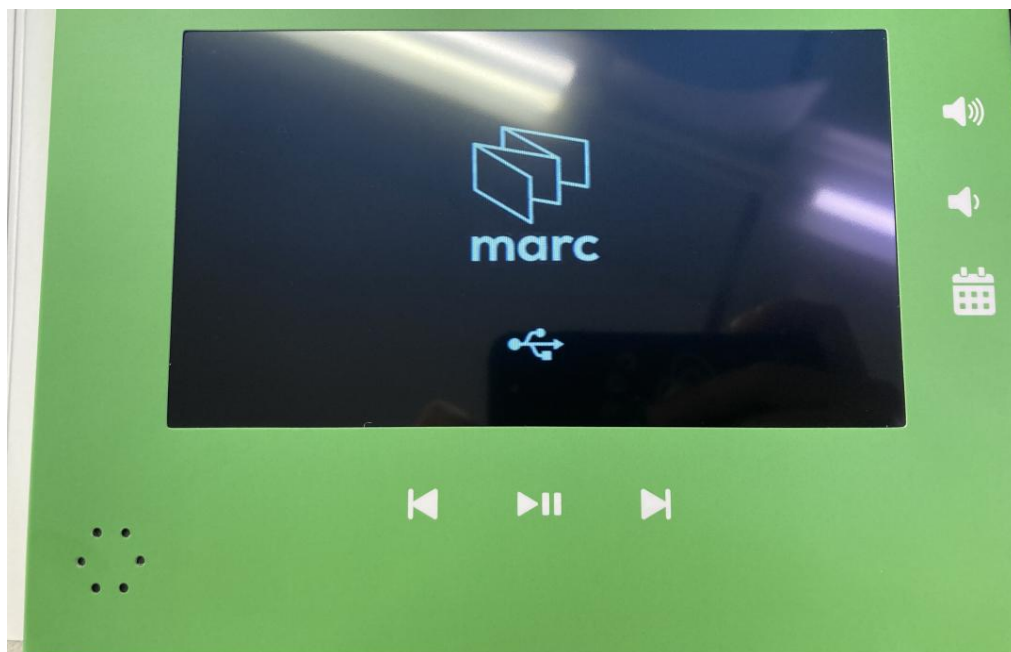


2. Open the folder, remove the test video or photo, and upload your own video or photo. It works just like a USB drive.

Inside the brochure, you'll find one video folder and one photo folder. These are linked to the buttons through the software and cannot be deleted, so please only replace the files inside them.



Delete the test video or photo inside the folder, then upload your own. Videos should be named using numbers (e.g., 1, 2, 3... up to 7) — they will play in that order. For the photo, since there's only 1, you can name it whatever you like.

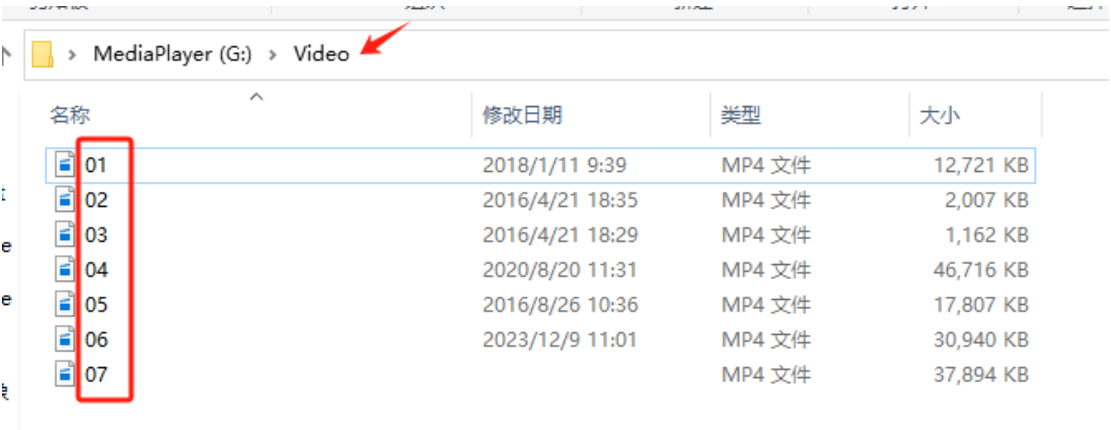

LCD SCREEN	RESOLUTION	Ratio	bit stream	(fbps)
7	1024x600	16:9	5000	25

Video support: 3GP.MP4.ASF.AVI